 




Refill & Reset Instruction for EPSON C1100 Series

 


1. Insert the screwdriver into the cartridge window to unlock the cartridge. Slightly turn the top part of the cartridge until you can see the refill hole. (See picture below)

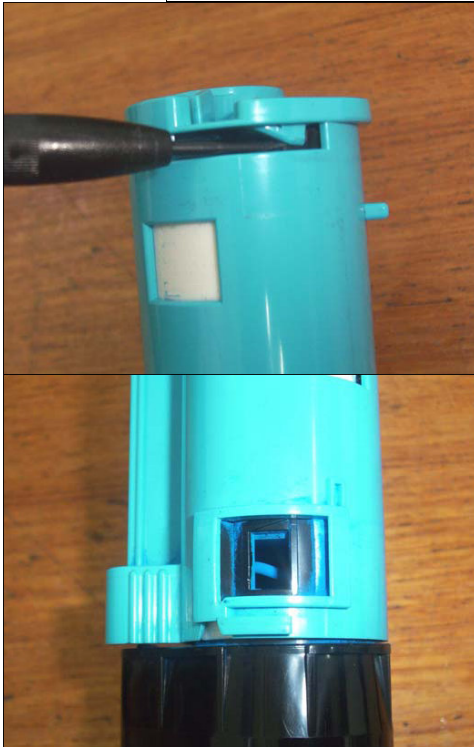

2. All the remaining toner in the cartridge has to be pulled out from the refill hole before refill. (The hole pointed by screw driver).

3. Empty any carrier-toner left on the waste hopper bin by pulling them out from the waster hole. (The hole on the right of the refill hole) If the waste tank is full, the print will

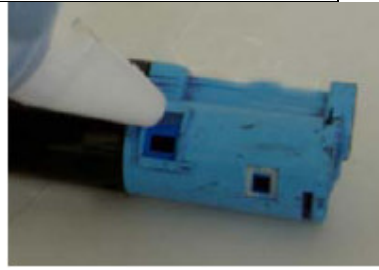

4. Refill the toner into the cartridge (see picture above).

P.S: If you find the nozzle that goes on the end of the bottle is too large to fit into the hole on the toner cartridge, making a paper funnel and put inside the nozzle to narrow the nozzle.



5. The chip on the cartridge pointed by the screw driver will not block you printer. Printer may still report low toner after refill; however this will not effect your printing at all time.

Note:

If the Epson C1100 printer does not recognize the refilled cartridge, follow these steps:

- 1) Restart the printer by turning it off for 2-3 minutes, then turning it back on
- 2) After the printer has restarted, take out the cartridge and shake it and reinstall it
- 3) If these steps don't work, try removing waste toner from the waste hopper. The reason for this is because if the machine sees too much toner in the waste hopper, it may think the cartridge is empty.